



# Get Packed Pty Ltd

## HI-BOND No.K35 Tape Loading & Operating Instructions

### Step 1



Separate 'white liner paper' from 'adhesive tissue'.

### Step 2



Unwind 'white liner paper' around roll whilst holding adhesive tissue.


### Step 3



A. The roll will now have the 'adhesive tissue' on the outside.

B. Turn tape over, 'adhesive tissue' down.

### Step 4

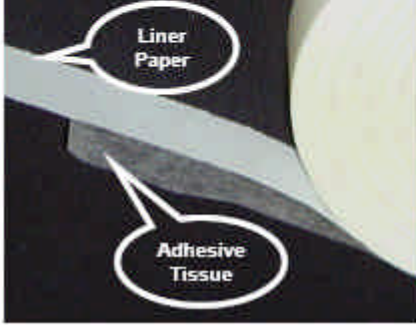

The 'white liner paper' is now extended approx 260mm (10½") past the 'adhesive tissue' do not cut or tear this off.

### Step 5




Place the roll of tape onto the centre spool, pull trigger to release tape and thread as per picture above. Ensure that the 'adhesive tissue' does not go past the application roller.

### Step 6



Thread the 'white liner paper' into the slot in the 'take up spool'.

### Step A

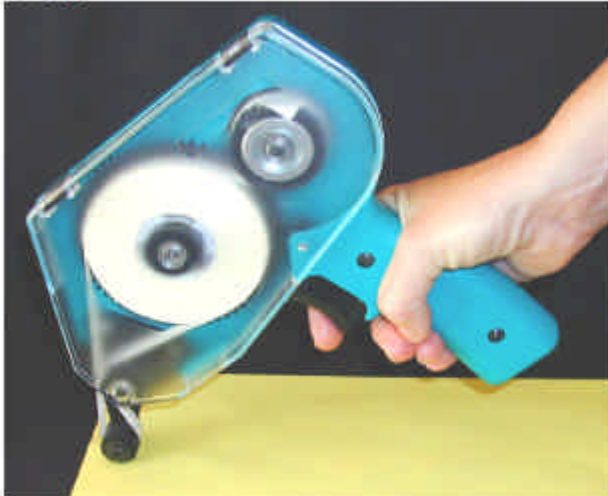

Press application roller firmly onto surface, pull trigger and roll 'adhesive tissue' to desired length.

### Step B



Release trigger and continue to pull dispenser away to break 'adhesive tissue' at desired length, do not lift dispenser whilst pulling away.